


Indoor unit	
A1P	Printed circuit board
A2P	Printed circuit board
A3P	Printed circuit board
A3P	(Humidity sensor unit)
C21	Capacitor
C105	Capacitor
H4P	Light emitting diode (service monitor green)
M1F	Motor (indoor fan)
M1P	Motor (drain pump)
M1S-M4S	Motor (swing flap)
R1T	Thermistor (air)
R2T-R3T	Thermistor (coil)
S1L	Float switch
SS1	Selector switch (emergency)
V1R	Diode bridge
X1M	Terminal block
X2M	Terminal block
Z1C	Ferrite core (Noise filter)
Z1B	Noise filter
CPB	Power supply circuit
CPB	
RC-	Signal receiver circuit
TC-	Signal transmission circuit
Wired remote controller	
R1T	Thermistor (air)
Receiver/display unit (Attached to infrared remote controller)	
A4P	Printed circuit board
A5P	Printed circuit board
B51	Push button (on/off)
H1P	Light emitting diode (on-red)
H2P	Light emitting diode (lime-green)
H3P	Light emitting diode (fiber sign-red)
H4P	Light emitting diode (dehrost-orange)
SS1	Selector switch (main/sub)
SS2	Selector switch (infrared address set)
Adaptor for wiring	
F1U	Fuse (5A, 250V)
F2U	Fuse (5A, 250V)
KCR	Magnetic relay
KFR	Magnetic relay
KHUR	Magnetic relay (H)
Connector for optional parts	
X2A	Connector (Sensor kit)
X8A	Connector (Auto clean panel)
X24A	Connector (Infrared remote controller)
X33A	Connector (adaptor for wiring)
X35A	Connector (group control adaptor)
X36A	Connector (Auto clean panel)

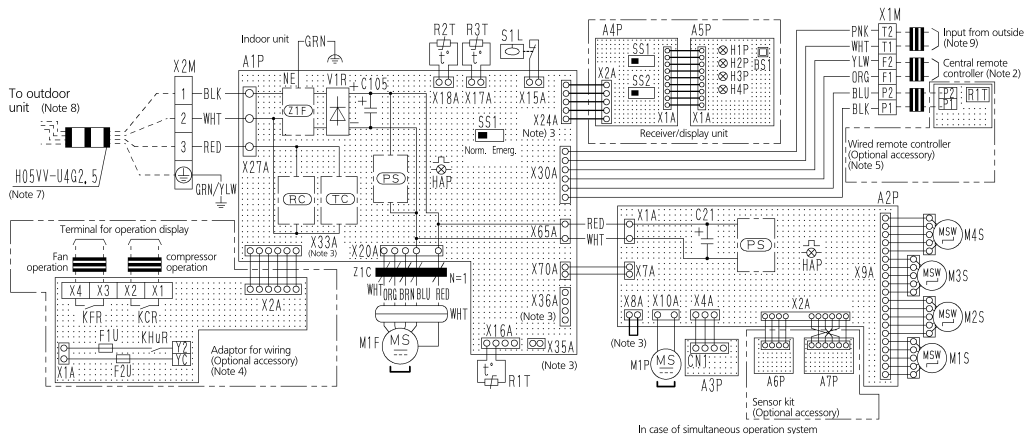

Notes

- : Terminal block, , : Connector, : Field wiring
- In case using central remote controller, connect it to the unit in accordance with the attached installation manual.
- X2A, X8A, X33A, X35A, X36A are connected when the optional accessories are being used. In case of using an auto clean panel, see the wiring diagram of it.
- Connect power of adaptor for wiring to terminal block (X2M) of indoor unit directly.
- In case of main/sub interchange, see the installation manual attached to remote controller.
- Symbols show as follows: RED:Red BLK:Black WHT:White YLW:Yellow GRN:Green ORG:Orange BRN:Brown PNK:Pink GRY:Grey BLU:Blue.
- Shows only in case of protected pipes, use HO7RN-F in case of no protection.
- For the detail, see wiring diagram attached to outdoor unit.
- When connecting the input wires from outside, forced OFF or ON/OFF control operation can be selected by the remote controller. See installation manual for more details.

In case of simultaneous operation system

