FCQG35-71F
with auto-cleaning panel

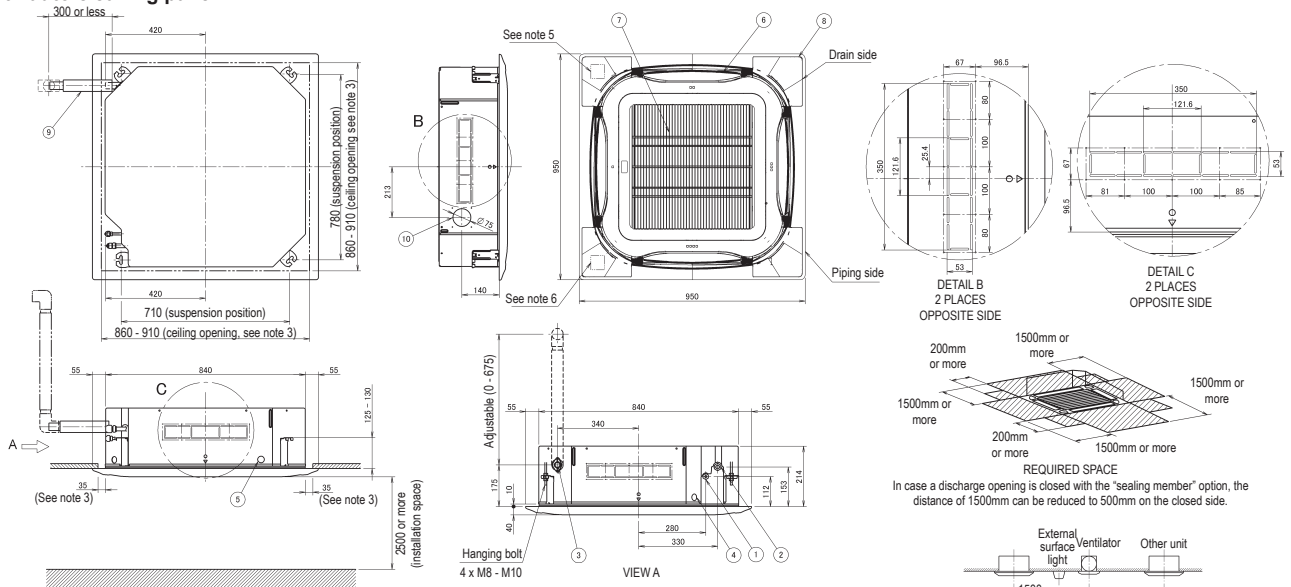

REQUIRED SPACE

In case a discharge opening is closed with the "sealing member" option, the distance of 1500mm can be reduced to 500mm on the closed side.



NOTE

1. Location of the nameplates
   - Unit body: on the control box cover
   - Decoration panel: on the panel frame at the piping side under the corner cover
2. When installing an optional accessory, refer to the installation drawings.
   - For fresh air intake kit an inspection part is necessary
3. Make sure the spacing between the ceiling and the cassette is no more than 35mm. Max ceiling opening: 910mm
4. When the conditions exceed 30°C and RH 80% in the ceiling or fresh air is inducted into the ceiling, an additional insulation is required (polyethylene foam, thickness 10mm or more)
5. In case of using a sensor kit, this position will be a sensor, refer to the drawing of the sensor kit for more detail
6. In case of using a infrared control, this position will be a receiver, refer to the drawing of the infrared control for more detail

Item	Name
1	Liquid pipe connection
2	Gas pipe connection
3	Drain pipe connection
4	Power supply entry hole
5	Transmission wiring entry hole
6	Air discharge opening
7	Air suction grille
8	Corner decoration cover
9	Drain hose
10	Knock out hole

Model
FCQG35-71FVEB, FXFQ20-63AVEB

FCQG100-140F
with standard panel

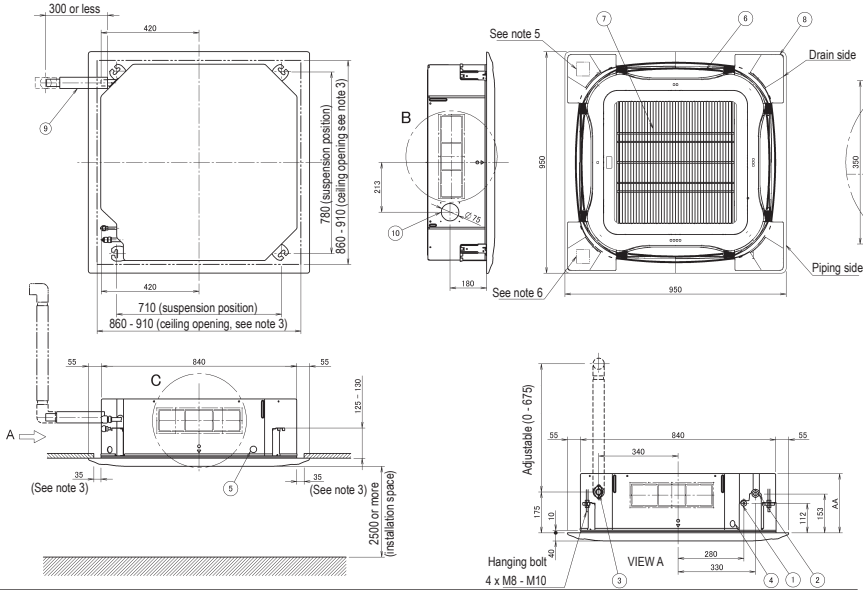

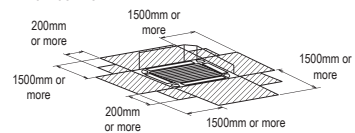

In case a discharge opening is closed with the "sealing member" option, the distance of 1500mm can be reduced to 500mm on the closed side.



NOTE

1. Location of the nameplates
   - Unit body: on the control box cover
   - Decoration panel: on the panel frame at the piping side under the corner cover
2. When installing an optional accessory, refer to the installation drawings.
   - For fresh air intake kit an inspection part is necessary
3. Make sure the spacing between the ceiling and the cassette is no more than 35mm. Max ceiling opening: 910mm
4. When the conditions exceed 30°C and RH 80% in the ceiling or fresh air is inducted into the ceiling, an additional insulation is required (polyethylene foam, thickness 10mm or more)
5. In case of using a sensor kit, this position will be a sensor, refer to the drawing of the sensor kit for more detail
6. In case of using a infrared control, this position will be a receiver, refer to the drawing of the infrared control for more detail

Item	Name
1	Liquid pipe connection
2	Gas pipe connection
3	Drain pipe connection
4	Power supply entry hole
5	Transmission wiring entry hole
6	Air discharge opening
7	Air suction grille
8	Corner decoration cover
9	Drain hose
10	Knock out hole

	Model
256	FCQG100-140FVEB, FXFQ80-100AVEB
298	FCQHG71-140FVEB, FXFQ125AVEB